



REA-Jet 440-232-0555 info@reajetus.com

- When replacing ink jug, **replace filter and hose!**
- Never run a print head without a filter!
- If the ink bottle cap gets gummed up, soak it in acetone to free it up.
- Caution: Do not reverse the lines on the ink cap, it will cause costly repairs!
Install check valve between the print air regulator and the ink bottle to help prevent damage.
- Do not run air through the print head, either with bubbles in the line or by letting the ink run out, it will leave crusty ink inside the print head.
- **Never** supply more than 10lbs of pressure to the print head. Additional air pressure will not clean out jets, it will blow them out of alignment.
- Do not stick anything into the jets, it will severely damage the print head.
- Do not cut ink with WD-40 or any other substance.

Acetone Ink Part # 2600-357 5L - Acetone Cleaner Part # 0060-05L

TCT Automation, LLC - 352-735-5070 - www.tctautomation.com

25410 McDowell Court - Sorrento, FL 32776