



INSTALLING YOUR PCI PMAC CARD

1. Turn off your PC and unplug your PC. Remove the side cover.
2. It is very important to ensure your Y Cable is connected as pictured:



The Board is Marked At The
Connection Ports
26 Pin to the J3
34 Pin to the J5

Failure to do so will cause
permanent damage to your
cable and possibly more!

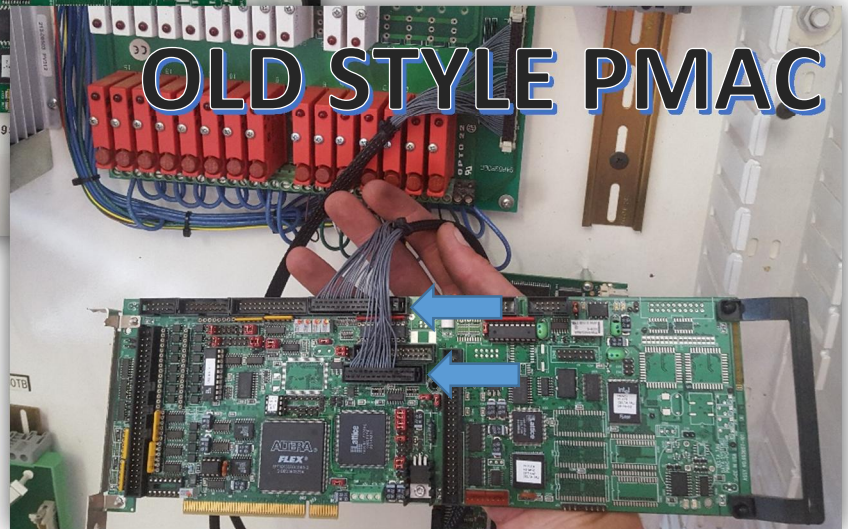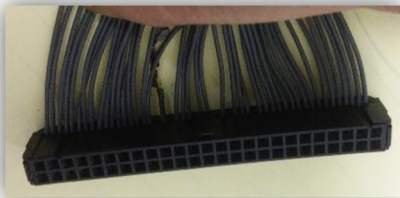

3. Firmly press your PMAC into the PCI Port of your PC & tightly place the set screw.
4. Be sure to use zip ties to support the end of your card and prevent it from cracking at the bus tab:

